

Predator Gaming Chair x OSIM PGC090, PGC091

Thank you for purchasing the Predator Gaming Chair x OSIM chair. Please read the operation manual thoroughly for the correct methods of usage and take special notice of the safety section before you start.

This manual should be kept on hand for easy reference. It is your guide to a safe and efficient operation.

Contents	Safety	2
	Names of parts and functions	5
	Preparation before use	6
	Operation	10
	Product care and storage	14
	Troubleshooting	15
	Specifications	17



IMPORTANT SAFETY INSTRUCTIONS

When using the product, please take special notice of the following basic precautions:

Read all instructions before using the product:

DANGER – To reduce the risk of electric shock:

Always unplug this product from the electrical outlet immediately after use and before cleaning.

WARNING – To reduce the risk of burns, fire, electric shock, or injury to persons:

- 1) The product should never be left unattended when plugged in. Unplug from electrical outlet when it is not in use, and before putting on or taking off parts.
- 2) Use this product only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- 3) Never operate the product if it has a damaged cord or plug, a malfunction, or it is dropped into the water. Return the product to OSIM Service Center for examination and repair.
- 4) Do not carry this product by the power cord or use the power cord as a handle.
- 5) Keep the product power cord away from heated surfaces.
- 6) Do not drop or insert any objects into any openings of the product.
- 7) Do not use this product outdoors.
- 8) Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
- 9) To disconnect, turn off all controls and remove the power plug from the electrical outlet.
- 10) Do not stand on or in the product. Use only while seated.
- 11) Children should be supervised to ensure that they do not play with the product.
- 12) This product can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- 13) Cleaning and user maintenance of the product shall not be made by children.
- 14) The product is only to be used with the power adaptor provided.

SAVE THESE INSTRUCTIONS

This product is intended for household use only



Safety

Usage environment

- Do not operate the product in environments with high temperature and/ or high humid.
- Do not operate the product in a dusty environment.
- Do not expose the product to heaters, stoves or direct sunlight.
- Place and use the product on an even non-slip floor.
- This product is **not for commercial purposes**.

Safety precautions

- Remove all accessories from body before use.
- Do not use the product when the upholstery or seat is removed or with internal component exposed. This may cause injury or malfunction.
- Do not rest or place heavy objects on the product as this may result in malfunction or damage to it.
- To prevent accidental injury, do not allow children and pets to play near the product, especially under the back of the chair, under the seat.
- Remove power plug from the electrical outlet immediately should liquid be accidentally spilled onto the product as this may result in electric shock.
- Users must not attempt to disassemble or repair the chair. All repairs or replacement of parts must only be done at OSIM Service Center or by an authorized service agent.
- Power cord must be unobstructed at all times, i.e. not twisted, not wind around the product and do not place anything heavy object on it.

- Do not use the product if the electrical outlet is loose.
- When disconnecting the power plug, pull it out by holding the plug, not the cord.
- Do not use the product in the event of a power failure. Injury may occur when power is restored unexpectedly.
- Wait for at least an hour after meal before using the product.
- Recommended to keep massage sessions to 30 minutes a day.
- Wear suitable clothing, do not massage with bare skin.
- Do not use the product when your body is wet or operate with wet hands.
- Do not place your hands or feet along the path of the moving mechanism during use as this may cause injury.
- Do not use the product if you are not feeling well or under the influence of alcohol.
- This product is not intended for self-diagnosis or self-treatment of conditions that should be managed by a qualified health care provider.
- Stop using immediately and consult your health care provider should you experience discomfort or any abnormal or severe pain.
- If you are under any medication or have (but not limited to) any of the below medical conditions, please consult your health care provider first before use.
 - a) Heart Disease
 - b) High or Low Blood Pressure
 - c) Pregnant or menstruating
 - d) Medical implants
 - e) Recently underwent surgical operations
 - f) With any bone fractures
 - g) Motion sickness or anxiety attacks


Safety

Grounding Instructions (For Canada / USA)

This product must be grounded. If it should malfunction or break down, grounding provides a path of least resistance for the electric current to reduce the risk of electric shock. This product is equipped with a cord with an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.


DANGER - Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or service technician if you are in doubt as to whether the product is properly grounded. Do not modify the plug provided with the product - if it will not fit the outlet, have a proper outlet installed by a qualified electrician.

This product is for use on a nominal 120V circuit and has a grounding plug that looks like plug illustrated below. Make sure that the product is connected to an outlet having the same configuration as plug. No adaptor should be used with this product.

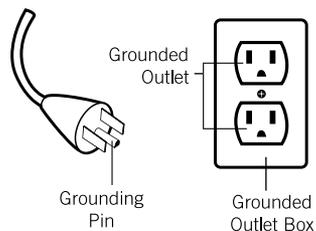

Names of parts and functions

Main unit

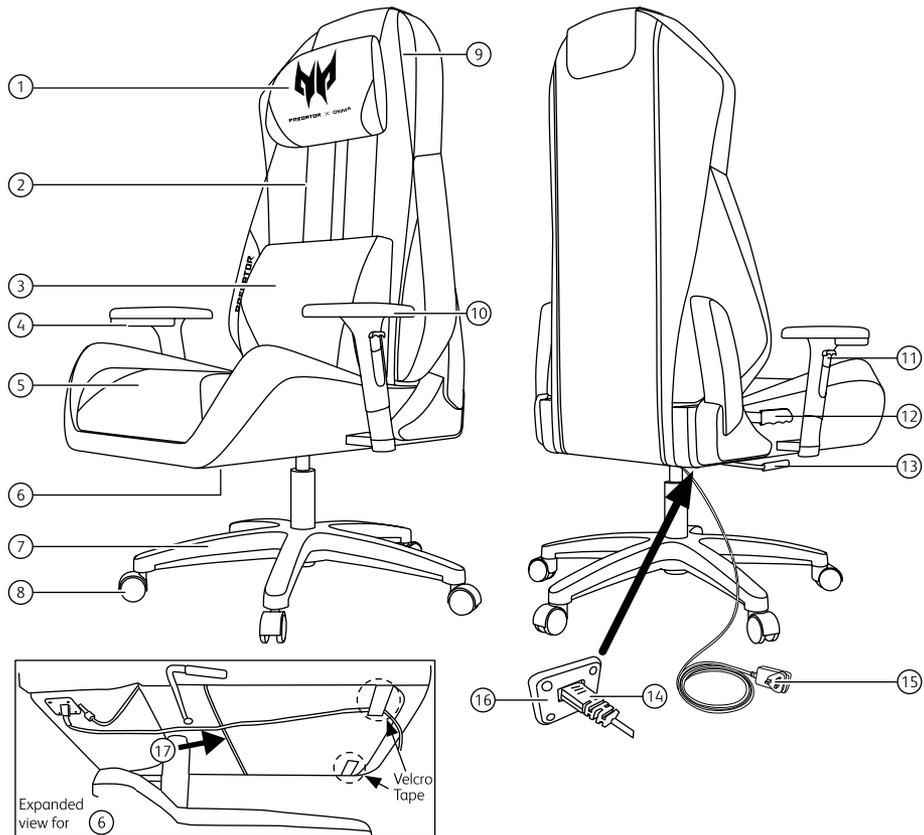


*Product images are for illustrative purposes only and are not drawn to scale.

- | | |
|---|----------------------------------|
| 1. Headrest pillow | 10. Armrest |
| 2. Backrest | 11. Armrest height locking latch |
| 3. Backrest cushion | 12. Backrest angle locking lever |
| 4. Control panel with sliding cover | 13. Seat height locking lever |
| 5. Seat | 14. Adaptor jack |
| 6. Cable holding strap (under the seat) | 15. Power adaptor* |
| 7. Wheel stand | 16. Power socket |
| 8. Castor wheel | 17. Pocket for adaptor storage |
| 9. Speakers (Bluetooth music stream)# | |

* Power adaptor plug will vary according to country
 # Search and connect to BT (ID: OSIM-xxxxxxx)

Names of parts and functions

Control Panel

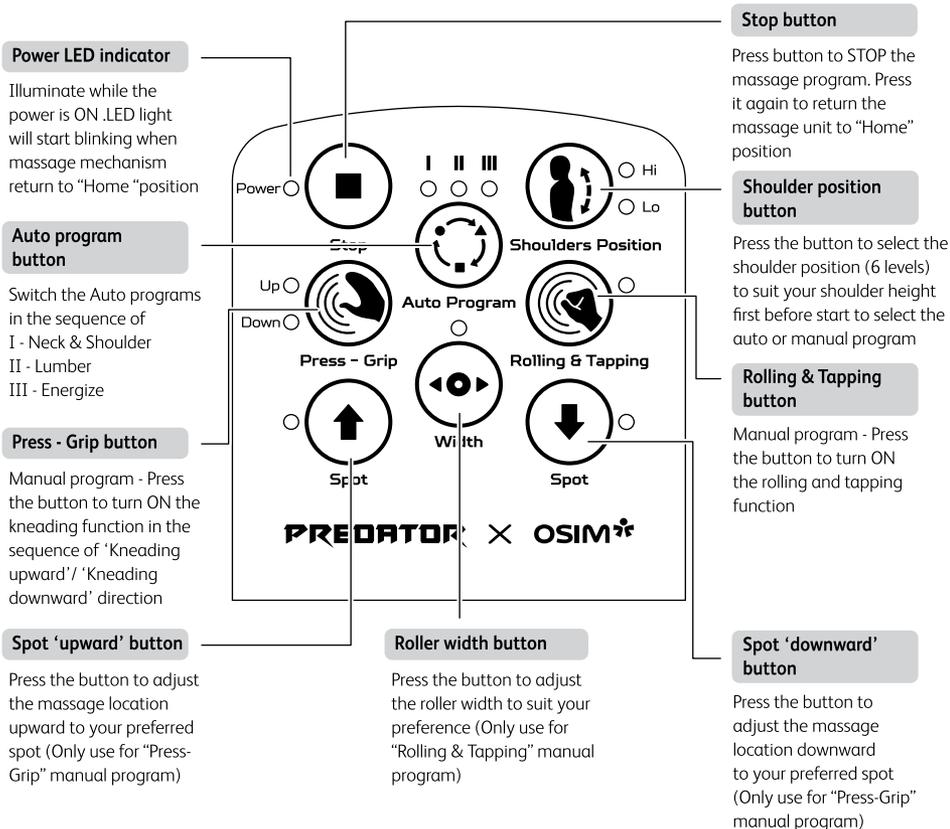


⚠ Caution

- Do not sit, step or place heavy objects on the control panel.
- Do not exert excessive force on the control panel.
- Do not operate the control panel with wet hands.
- Do not operate the control panel using sharp-edged or hard objects. It may result in damage.

Preparation before use

Setting up the product

- Unpack the carton and assemble the items accordingly to the provided instruction sheet.
- Before use, ensure that the backrest is raised fully to its upright position.

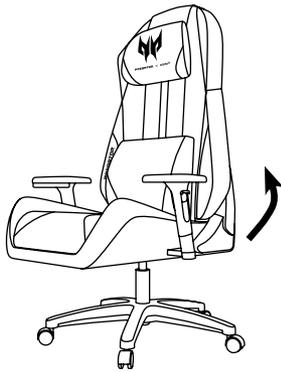


Placing the backrest cushion

- Place the backrest cushion on top of the seat as shown.




Placing the headrest pillow

- Place the headrest pillow on top of the backrest and insert its flap through the strap as shown

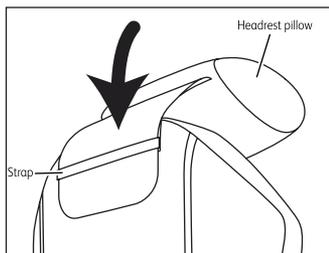

Positioning the product


- Ensure a space allowance of at least 70cm behind the product to prevent obstruction when it reclines.

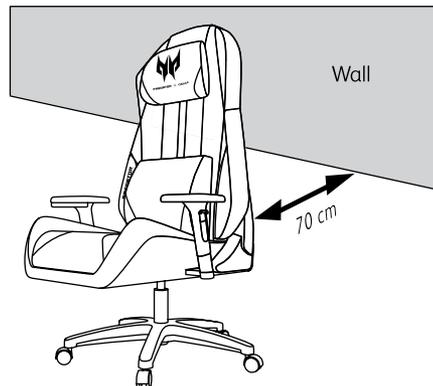

Preparation before use

To switch on the power

- Route the adaptor jack through the cable holding strap under the seat and connect it into the power socket.
- Connect the power adaptor to the electrical outlet.
- Turn on / off the chair by switching the main power of the electrical outlet

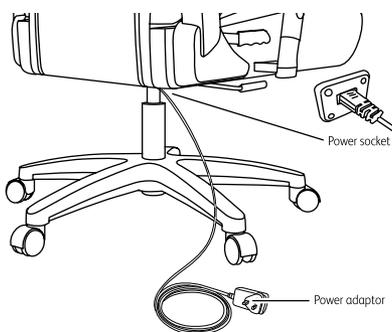


Caution

- Ensure the power cord is not placed under the chair.
- Beware that the power cord might get entangle or routed on the chair base over the time. Check and release power cord to prevent power trip.
- Ensure all switches are turned 'OFF' (including the main switch) before connecting the power adaptor to an electrical outlet.

Moving the chair

The chair is fitted with casters for easy manoeuvring over a short distance.

- Raise the backrest fully to its upright position and lower the seat's height.
- Switch OFF the main power and disconnect the power adapter.
- Push the chair carefully (shown below) to the desired location.

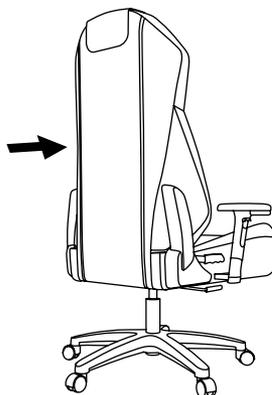


Note

- As the chair is fitted with casters, please do not move the chair during operation to avoid a power trip.
- Do not move the chair with someone on it as this might tip over the chair and cause an accident and injury.

Preparation before use

Backrest angle adjustment


- Pull up the backrest angle locking lever as shown.
- Lean your upper body backwards to your preferred recline angle.
- Release the lever to lock the selected position.

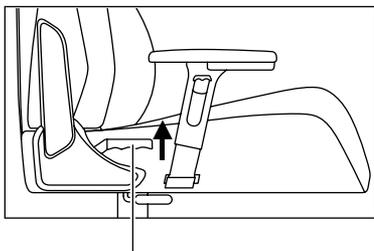

Backrest angle locking lever

Armrest height adjustment


- Pull up the armrest height locking latch as shown.
- Slide the armrest upwards or downwards to your preference height.
- Release the latch to lock the selected position.

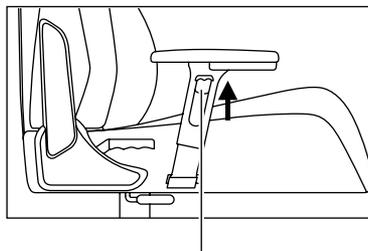

Armrest height locking latch

Seat height adjustment

- Pull up the seat height locking lever as shown.
- Lift up your lower body or use body weight to adjust to your preferred sitting height.
- Release the lever to lock the selected position.

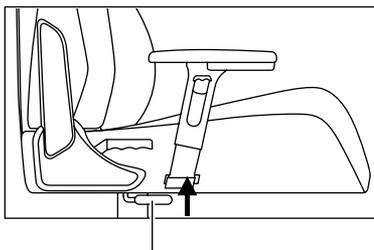

Seat height locking lever

Caution

- Ensure that the backrest is at its most upright position before sitting on the chair and reclining to your preferred position.
- Do not place fingers or objects in the gap between the headrest, backrest and seat during adjustment.
- Ensure that there is no obstruction when adjusting the angle / height of the backrest and seat.

Operation

Auto Program Operation

- Turn on the power.
- Press any function key, the massage mechanism will moving upward from its home position (bottom of the backrest) to user shoulder position.
- Press the “Shoulder Position” button to adjust to user preference shoulder position. There are 6 levels of shoulder position. Ideal shoulder position is to place the bottom of the top roller just touching your top shoulder surface. By default, the roller will move to the lowest shoulder position. Just press the button once to move the roller to the next higher position and so on if feel the roller position is too low.
- Once confirm the shoulder position. Press “Auto Program” button to start the auto program.
- User can switch the type of auto program between “I / II / III” by just pressing the same “Auto Program” button.
- Total massage duration is 15 mins.
- Press the “Stop” button to end the massage operation. Press the “Stop” button again to return the massage mechanism back to home position.

Note

- Under auto program operation, the “Width”; “Spot (Up)”; “Spot (Down)” will not be able to operate.
- User can just press the “Knead” or “Roll & Tap” button to switch to manual program.

Operation

Manual Program Operation

- Turn on the power.
- Press any function key, the massage mechanism will moving upward from its home position to user shoulder position.
- Press the “Shoulder Position” button to adjust to user preference shoulder position. There are 6 levels of shoulder position. Ideal shoulder position is to place the bottom of the top roller just touching your top shoulder surface. By default, the roller will move to the lowest shoulder position. Just press the button once to move the roller to the next higher position and so on if feel the roller position is too low.
- For “Roll & Tap” massage function :
 - Press “Width” button to adjust your preference roller width to massage. The width of the massage roller will move from narrow to wide then wide to narrow.
 - Press “Roll & Tap” button to start the rolling and tapping massage function. The massage mechanism will move from upper body towards lower body and then go back to upper body and vice versa
- For “Knead” massage function :
 - Press “Knead” button to start the kneading massage.
 - User can select their preference kneading motion (Upward or Downward) by just toggling the same button.
 - User can also further select their preference kneading location between their upper and lower back by just pressing the “Spot (Up)” or “Spot (down)” buttons.
- Both “Roll & Tap” and “Kneading” massage function can operate at the same time by just pressing the respective button.
- Total massage duration is 15 mins.
- Press the “Stop” button to end the massage operation. Press the “Stop” button again to return the massage mechanism back to home position.

Note

- Under manual program operation, “Spot (Up)” and “Spot (Down)” buttons are not applicable for “Tap & Roll” function. And “Width” button is not applicable for “Knead” massage function.

Operation

Function Operation Table

Buttons	Shoulder Position	Width	Spot (Up)	Spot (Down)	Stop
Auto Programs	OK	-	-	-	OK
Manual Program					
Roll & Tap	OK	OK	-	-	OK
Knead (Up / Down)	OK	-	OK	OK	OK

Operation

Pairing of Bluetooth function

- Turn on the product power
- Turn on the Bluetooth function on your mobile device by accessing the Bluetooth Setting Screen.
- Mobile device will show a list of available items pending for pairing.
- Select the item indicate "OSIM-xxxxxxx" to start pairing.
- Speaker will acknowledge with a "Peep" sound once pairing is successful.
- User now can start playing their music through Bluetooth function on the product speaker
- Turn off your mobile device Bluetooth function if not in used. The speaker will also acknowledge with a "Peep" sound when disconnect the pairing.



Product care and storage

Chair placement and storage

Environmental factors can strongly affect the product physically and mechanically. Do not expose the product to direct sunlight or in places with extreme heat or air-conditioning vents. These can cause the upholstery to dry up, crack or the color to fade.

If the product is not to be used for a long period of time, cover it with a dust cover and disconnect the power plug from the electrical outlet.

Ensure enough space between the chair and surrounding furniture items and wall for unobstructed movements during chair usage. Direct contact between the exterior of the chair with other furniture items and walls will cause abrasive damage to the upholstery.

Clean the product using a dry lint-free cloth

Before cleaning, ensure that the main switch is turned off and the power plug is disconnected from the electrical outlet.

The upholstery of the product is customarily exposed to the natural body oils of users. The main unit structure and fabric can be cleaned thoroughly with a piece of soft, dry cloth. The common micro-fiber cleaning materials or gloves are very well suited for this routine maintenance process. Such materials and gloves are available for sale in most DIY shops.

Do NOT use wet elements for cleaning

The product is made up of electrical components and mechanical parts, which are all very sensitive to moisture. Under no circumstances should they be exposed to any form of water or moisture. If you use water (eg. a wet cloth) to clean the upholstery, the coating may be eroded and the protection for the product will be diminished.

As for the controller, it may result in malfunction if you use a wet cloth to clean.

Do NOT use cleaning solvents

Under no circumstances should you use any cleaning agents, like benzene or thinner to clean the product. This may cause the color of the upholstery to fade.

Do not wash the upholstery using washing machine. This may result in the deterioration of upholstery quality.

Do NOT attempt to repair your product

Under no circumstances should you attempt to repair the product, for safety reason.

If you suspect a malfunction, always call OSIM Service Center for further assistance and information.



Troubleshooting

If you encounter problems with the operation of the product, please check the following points to see if they can be rectified. If the product still malfunctions or does not work, please switch off the product and remove the power plug from the electrical outlet. Contact OSIM Service Center* for servicing.

Do not disassemble or attempt to repair the product yourself. Doing so will void the warranty and OSIM will not be responsible for any subsequent consequences.

Problem	Possible causes/actions
<ul style="list-style-type: none">• Frictional sound of rollers against backrest.• Motor sound during operation.• Loud sound during kneading, tapping and rolling massage.	<ul style="list-style-type: none">• These sounds originate from the internal mechanism within the product during operation.• This may occur during normal usage and is not due to malfunction.
<ul style="list-style-type: none">• The control panel does not function correctly.	<ul style="list-style-type: none">• Check the power plug and ensure that it is securely connected to the electrical outlet.• Ensure that the main power switch is turned 'ON'.
<ul style="list-style-type: none">• The power adaptor and cord are abnormally hot.	<ul style="list-style-type: none">• Stop use the product immediately and contact OSIM Service Center for assistance.
<ul style="list-style-type: none">• The massage stops midway.	<ul style="list-style-type: none">• The auto timer of 15 minutes has lapsed. Press any program button to restart the massage.• If the product fails to restart, turn off the main power switch on the electrical outlet. Turn it on again after 10 seconds.• If the same problem persists, please turn off the main switch, disconnect the power plug from the electrical outlet and contact OSIM Service Center.
<ul style="list-style-type: none">• The product does not function.	<ul style="list-style-type: none">• Ensure that the main switch and the switch on the electrical outlet is turned on.• Ensure that the power plug is firmly connected to the electrical outlet.• Check that the voltage at the electrical outlet is adequate.


Troubleshooting

Problem	Possible causes/actions
<ul style="list-style-type: none">• The massage rollers stop during the massage session.	<ul style="list-style-type: none">• The roller mechanism may be strained when subjected to excessive force.• Do not apply excessive force on the rollers.
<ul style="list-style-type: none">• If you encounter any problems other than the ones stated above, or the same problem persists.	<ul style="list-style-type: none">• Turn off the main switch, disconnect the power plug from the electrical outlet and contact OSIM Service Center* for assistance.

* Please visit us at www.OSIM.com for information on the nearest service center.
Product warranty is valid only in the country of purchase.

Specifications

Model name	Predator Gaming Chair X OSIM
Model number	PGC090, PGC091
Adaptor input	100-240V 50-60Hz
Adaptor output	24V  2.5A (Kindly ensure that the local Alternating Current (AC) voltage corresponds with product specified voltage)
Power consumption	60W
Auto timer	15 minutes
Backrest recline angle	Approx 145 degree
Armrest extension for height	6.5 cm
Seat extension for height	10 cm
Dimensions	
Backrest inclined position	68 (L) x 65.5 (W) x 121 (H) cm
Backrest reclined position	138 (L) x 65.5 (W) x 98.5 (H) cm
Weight	
Net weight	Approx. 27.5 kg
Gross weight	Approx. 34 kg

 

Notes

This device complies with Part 15 of the FCC Rules / Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Notes

Notes